


Panel Wiring Diagram Model AHW

use as a level alarm


Operation: This float activates the alarm light and audible alarm when lifted. The audible alarm may be silenced by pressing the illuminated PUSH TO SILENCE button on the front of the alarm panel. The alarm light will remain on until the float is lowered.

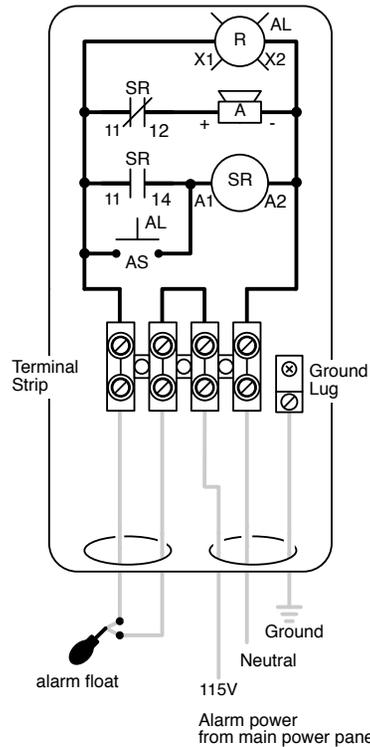


To insure alarm operation during a pump fault, power this alarm from a different power source than the pump, in pump tank systems.

use as a remote alarm

Operation: The 115 VAC signal (from the remote alarm connections of an Orenco Systems control panel) activate the alarm light and audible alarm. The audible alarm may be silenced by pressing the illuminated PUSH TO SILENCE button on the front of the alarm panel. The alarm light will remain on until the 115 volt signal is removed.

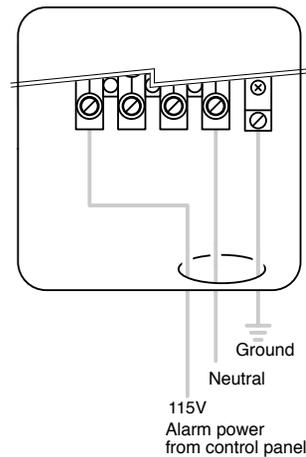

The model AHW is wired directly to the 115 VAC remote alarm connection of the control panel. This connection is identified on the panel wiring diagram as shown below.

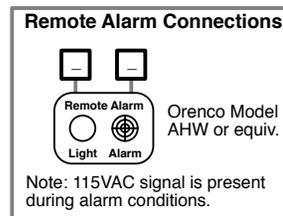

Key

- = Factory Wire
- - - = Field Wire
- A = Audio Alarm, 115 VAC
- AL = Alarm Light
- AS = Audio Silence Switch
- SR = Silence Control Relay (2P)