



# ClickTight™ Float Wiring Diagram

Check the appropriate box for the float configuration used in your system.

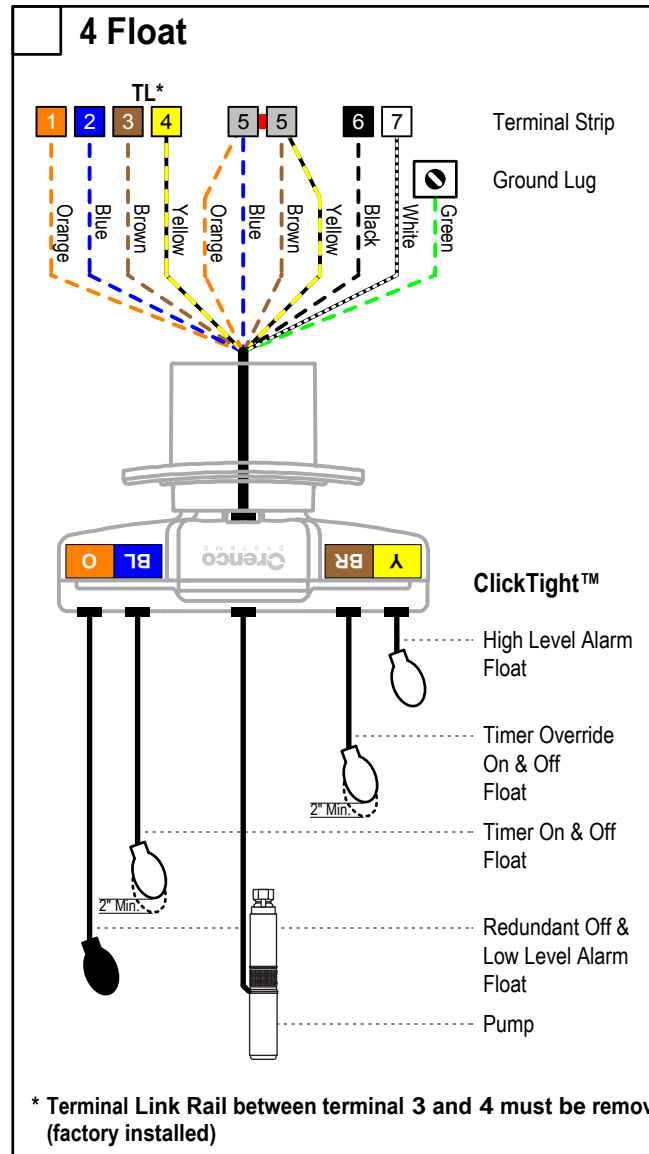

## Float Types

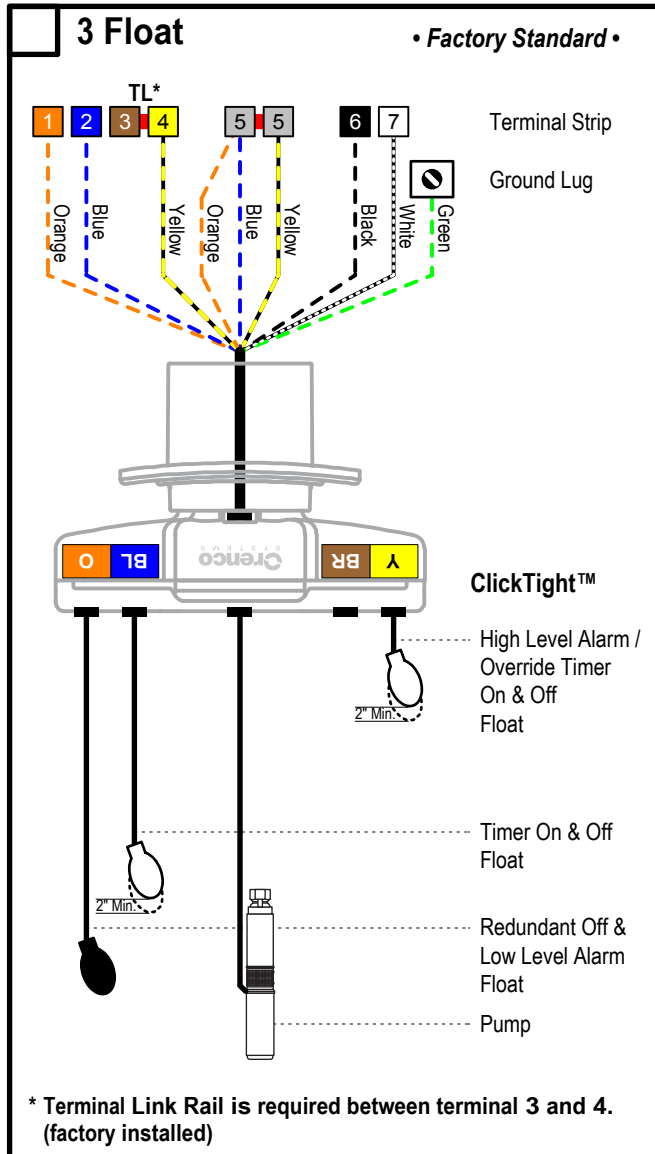

**Specs:** contact - normally open differential - no minimum power rating - signal




**Specs:** contact - normally open differential - 2" minimum power rating - signal



**Specs:** contact - normally closed differential - no minimum power rating - signal

## \* Link Rail Placement

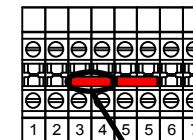

Terminal Link Rail

Move the terminal link rail for the desired mode of operation. Do not change the position of any other link rails in the panel.