

Float Wiring Diagram



Check the appropriate box for the float functions used in your system.

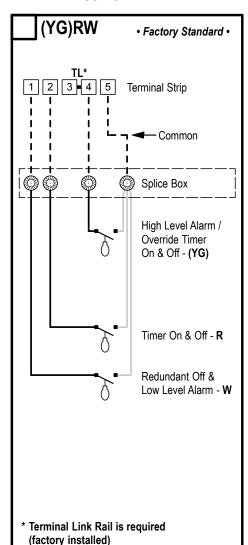


Control Panel Series: MVP-S DM (Timed Dose)

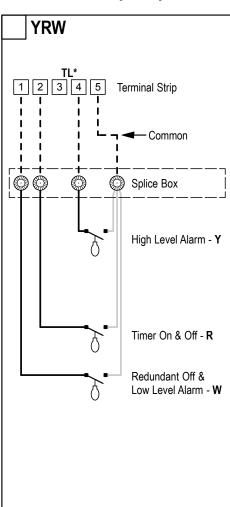

Remove pre-installed Terminal Link Rail

for instructions.

from terminals. See Panel Wiring Diagram

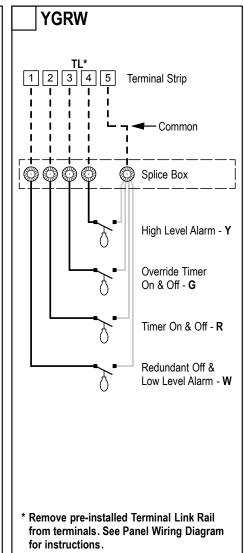

814 AIRWAY AVENUE SUTHERLIN, OREGON 97479-9012

Wires

- - Field Wire

Float Wire White
Float Wire Black

(541) 459-4449 FACSIMILE: (541) 459 2884

TELEPHONE: (800) 348-9843

WEBSITE:

www.orenco.com

Splices

٧

Specs: waterproof twist-on wire connector

Float Types

 Specs: contact - normally open differential - no minimum power rating - signal

Drawing No.: EDW-FA-S-24

EDW-FA-S-24 Rev 3.0 ©01/09/18