

Control Panel Wiring Diagram Model UV IB - SUB

— = Factory Wire
- - - - - = Field Wire



814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479

TOLL FREE:
(800) 348-9843


TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884

WEB SITE:
www.orenco.com

BALLAST
FULHAM
SHS1-UNV-C-1

From Main Power Panel
115 VAC, 1 Phase, 60 Hz.
Main disconnect
provided by others.

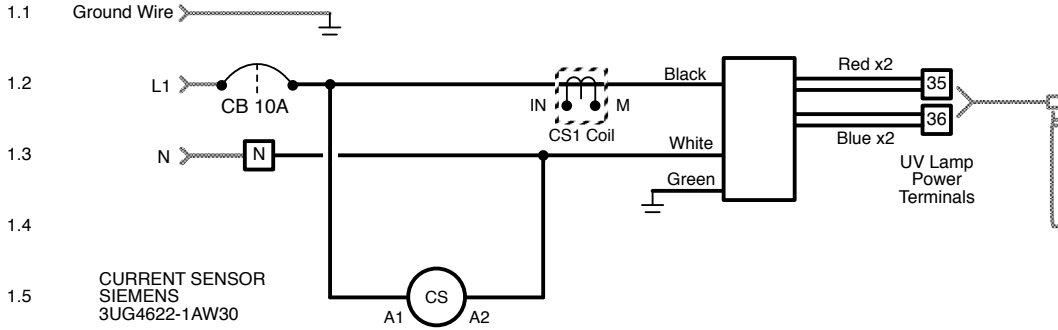

- 1.1
- 1.2
- 1.3
- 1.4
- 1.5
- 1.6
- 1.7
- 1.8
- 1.9
- 1.10
- 1.11
- 1.12
- 1.13
- 1.14
- 1.15
- 1.16
- 1.17
- 1.18
- 1.19
- 1.20
- 1.21
- 1.22
- 1.23
- 1.24
- 1.25

