
Float & Splice Box Wiring Diagram

For use in two pump systems, recirc. side.


Float Arrangement

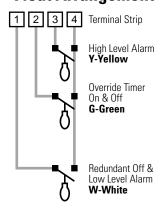

Float Types



Splice Box Wiring

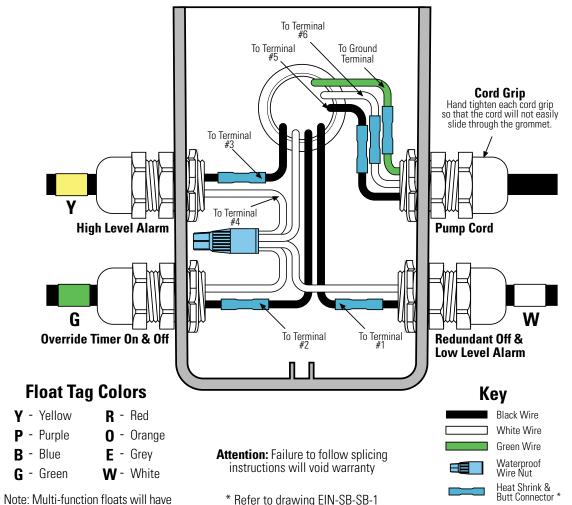

Control Panel Series

VCOM-AXB

Float Function Color Code

more than one marker

Splice Box Model

for splicing instructions.

Drawing No.

YGW/

SB4

EDW-FS-AX-2

EDW-FS-AX-2 Rev 1.0 ©08/10/01

Orenco Systems®

Incorporated

814 AIRWAY AVENUE

SUTHERLIN, OREGON

97479-9012

TELEPHONE:

(541) 459-4449

FACSIMILE: (541) 459-2884