
Float & Splice Box Wiring Diagram

For use in two pump systems, discharge side.


Float Arrangement

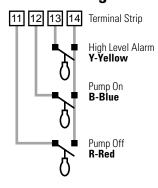

Float Types



Splice Box Wiring

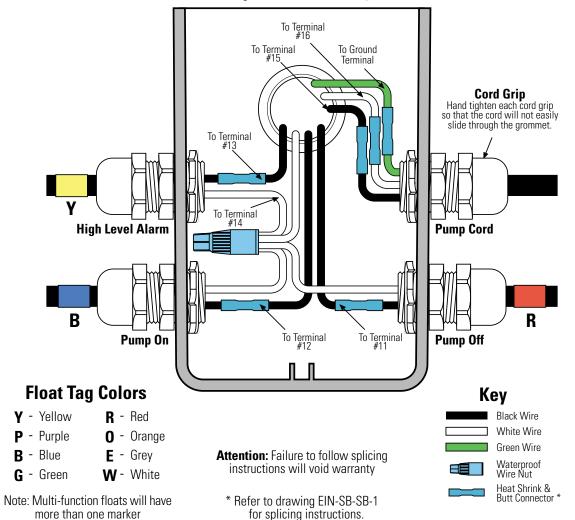

Orenco Systems®

814 AIRWAY AVENUE

Incorporated

SUTHERLIN, OREGON

97479-9012

TELEPHONE:

(541) 459-4449

FACSIMILE:

(541) 459-2884

Control Panel Series

VCOM-AXB

Float Function Color Code

Splice Box Model

Drawing No.

/YBR

SB4

EDW-FS-AX-3

EDW-FS-AX-3 Rev 1.0 ©08/10/01