

Carbon Filter Installation: Models CF3, CF4

Installation Instructions

Step 1: Remove Retaining Plug

Remove the retaining plug from the filter bottom.

Step 2: Install Reducing Bushing, If Necessary

For the Model CF3, if the roof vent is a 2-inch (50-mm) pipe instead of a 3-in. (75-mm) pipe, glue the supplied reducing bushing into the filter.

- Do not glue the bushing to the roof vent!

Step 3: Slide Filter on Vent Pipe

Step 3a: Slide the top cap onto the carbon filter.


- Press the cap down firmly to seat it on the filter.

Step 4b: Slide the carbon filter onto the roof vent.

Step 4c: Rotate the carbon filter 1/4 turn on the roof vent.

- Do not glue the carbon filter to the roof vent!

Note: In very cold climates, it may be necessary to wrap the filter with heat tape.

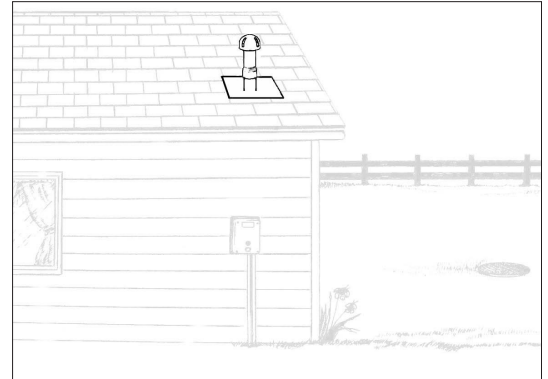

Carbon filters are often installed on roof vents to control odors. Use proper safety equipment and practices when working on roofs.

