



Panel Wiring Diagram Model MVP-DAX2 RO SA

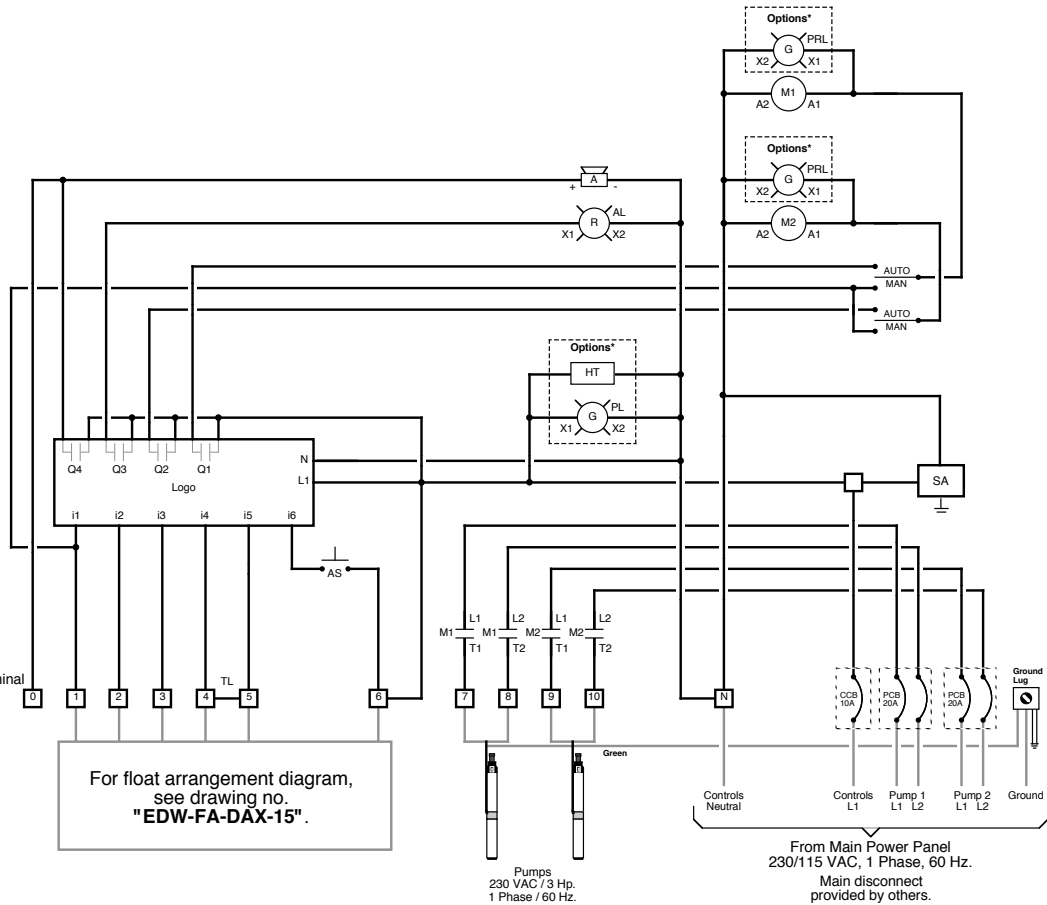

For float arrangement diagram,
see drawing no.
"EDW-FA-DAX-15".


NOTE: Motors must have
internal overload protection

Removal of Alarm / Lag Pump On Link Rail



Removal of the terminal link rail will separate the
high level alarm and lag pump on functions.

Remote Alarm Connections



Note: 115VAC signal is present
during alarm conditions.

Key

- = Factory Wire
- - - = Field Wire
- · - · = Alternate Field Wire
- A = Audio Alarm, 115 VAC
- AL = Alarm Light
- ALT = Duplex Alternator
- AS = Audio Silence Switch
- CCB = Controls Circuit Breaker
- Logo = Logic Module
- M = Motor Contactor
- PCB = Pump Circuit Breaker
- SA = Surge Arrestor
- SR = Silence Control Relay
- TL = Terminal Link

*Options

- HT = Heater
- PL = Power Light
- PRL = Pump Run Light

For MVP-DAX RO
operation
description, see
drawing no.
"EIN-CP-OP-85".

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479


TOLL FREE:
(800) 348-9843

TELEPHONE:
(541) 459-4499

FACSIMILE:
(541) 459-2884

WEB SITE:
www.orenco.com

Power Wiring Options

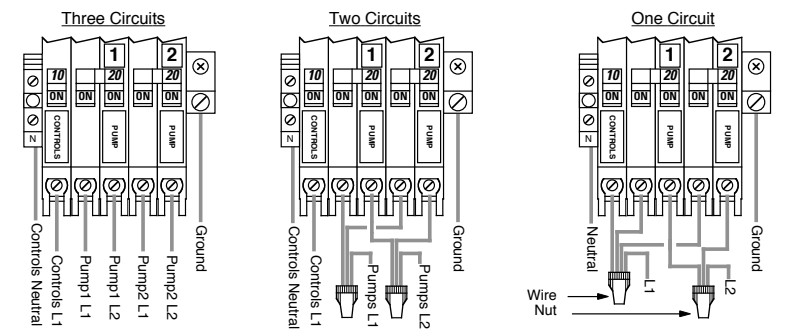

Factory default.
Wire as shown.

Use one wire nut to connect the first pole
of each pump circuit breaker together with
the incoming L1 power line. Use another
wire nut to connect the second pole of
each pump circuit breaker together with
the incoming L2 power line.

Use one wire nut to connect the first pole of
each pump circuit breaker together with the
controls breaker and with the incoming L1
power line. Use another wire nut to connect
the second pole of each pump circuit
breakers with the incoming L2 power line.